

<b>⚠ WARNING</b>
<p>To avoid unpredictable system behavior that can cause personal injury and property damage:</p> <ul style="list-style-type: none"> <li>• Disconnect electrical supply (when necessary) before installation, servicing, or conversion.</li> <li>• Disconnect air supply and depressurize all air lines connected to this product before installation, servicing, or conversion.</li> <li>• Operate within the manufacturer's specified pressure, temperature, and other conditions listed in these instructions.</li> <li>• Medium must be moisture-free if ambient temperature is below freezing.</li> <li>• Service according to procedures listed in these instructions.</li> <li>• Installation, service, and conversion of these products must be performed by knowledgeable personnel who understand how pneumatic products are to be applied.</li> <li>• After installation, servicing, or conversion, air and electrical supplies (when necessary) should be connected and the product tested for proper function and leakage. If audible leakage is present, or the product does not operate properly, do not put into use.</li> <li>• Warnings and specifications on the product should not be covered by paint, etc. If masking is not possible, contact your local representative for replacement labels.</li> </ul>

<b>⚠ WARNING</b>
<p><b>Product rupture can cause serious injury.</b>  <b>Do not connect regulator to bottled gas.</b>  <b>Do not exceed maximum primary pressure rating.</b></p>

<b>Safety Guide</b>
<p>For more complete information on recommended application guidelines, see the Safety Guide section of Pneumatic Division catalogs or you can download the <b>Pneumatic Division Safety Guide</b> at: <a href="http://www.parker.com/safety">www.parker.com/safety</a></p>

**Introduction**

Follow these instructions when installing, operating, or servicing the product.

**Technical Information**

These products are intended for use in general purpose compressed air systems only.

**Pneumatics**

**Working Media:** Compressed air or inert gasses, filtered to 40µ.

**Operating Pressure:**

Max. Operating Pressure..... 2 bar unit..... 3 bar (43.5 PSI)  
 10 bar unit ..... 10.5 bar (152 PSI)

Min. Operating Pressure ..... P2 Pressure + 0.5 bar (7.3 PSI)

**Pressure Control Range:** Available in two pressure ranges, 0-2 bar (0-29 PSI) or 0-10 bar (0-145 PSI). Pressure range can be changed through the software at all times. (parameter 19)

**Temperature Range:**..... 32°F to 122°F (0°C to 50°C)

**Weight:** ..... 10 oz.

**Air Consumption:** No consumption in stable regulated situation.

**Display:** The regulator is provided with a digital display, indicating the output pressure, either in PSI or bar. The factory setting is

as indicated on the label, can be changed through the software at all times (parameter 14).

**Mounting Position:** Preferably vertical, with the cable gland on top.

**Electronics**

**Supply Voltage:** .....24 VDC +/- 10%

**Power Consumption:**..... 1.1 W

**Current Consumption:** ..... Max. 200 mA with no load

**Control Signals:** The electronic pressure regulator can be externally controlled through an analog control signal of 0-10 V, adjustable to 4-20 mA via parameter 4.

**Connections:**..... Central M12 connector 4-pole

The electrical connections are as follows:

Pin No.	Function	Description	Color	
1	24 V	Supply	Brown	
2	0 to 10 V or 4 to 20mA	Control Signal Ri = 100k Ω	White	
3	0 V (GND)	Supply	Blue	
4	24 V	Alarm Output Signal	Black	

**Dead Band:** The dead band is preset at 1.3% F.S.\*, adjustable via parameter 13.

**Accuracy:** .....Linearity: = < 0.3% F.S.\*

**Proportional Band:** The proportional band is preset at 10% F.S.\*

**Fail-safe Operation:** After interrupting the **power supply voltage**, the present output pressure is maintained at approximately the same level. After switching the power supply on again, the pressure can be adjusted immediately by giving a new control signal.

**Full Exhaust:** Complete exhaust of the regulator is defined as P2 ≤ 1% F.S.\*

**Degree of Protection:** .....IP65

\* Full Scale

<b>⚠ WARNING</b>
<p><b>FAILURE OR IMPROPER SELECTION OR IMPROPER USE OF THE PRODUCTS AND/OR SYSTEMS DESCRIBED HEREIN OR RELATED ITEMS CAN CAUSE DEATH, PERSONAL INJURY AND PROPERTY DAMAGE.</b></p> <p>This document and other information from Parker Hannifin Corporation, its subsidiaries and authorized distributors provide product and/or system options for further investigation by users having technical expertise. It is important that you analyze all aspects of your application, including consequences of any failure and review the information concerning the product or systems in the current product catalog. Due to the variety of operating conditions and applications for these products or systems, the user, through its own analysis and testing, is solely responsible for making the final selection of the products and systems and assuring that all performance, safety and warning requirements of the application are met.</p> <p>The products described herein, including without limitation, product features, specifications, designs, availability and pricing, are subject to change by Parker Hannifin Corporation and its subsidiaries at any time without notice.</p>

**EXTRA COPIES OF THESE INSTRUCTIONS ARE AVAILABLE FOR INCLUSION IN EQUIPMENT / MAINTENANCE MANUALS THAT UTILIZE THESE PRODUCTS. CONTACT YOUR LOCAL REPRESENTATIVE.**

### Installation

1. Place muffler in Port 3
2. Connect the device to the Air Supply Port 1 and 2.
3. Connect Female M12 Connector on the Male Connector of the device.
4. Apply 24V = (10 second time delay for initialization of unit).
5. Air Supply to Port 1.
6. Give desired Set Point Signal.
7. Secondary Pressure will now be displayed.

### How to Change Parameters

Pressing the Accept key for 3 to 6 seconds, will activate parameter change mode. The user can then select the parameters by pressing up or down key (display will show Pxx). When parameter number is correct, pressing accept again will enter parameter number (display will show parameter value).

Pressing the up or down key will change the parameter itself (display will flash indicating parameter editing mode). Pressing the accept key will accept the new parameter value (all digits will flash while being accepted).

After releasing all keys, the next parameter number will be presented on the display (you may step to the next parameter). When no key is pressed, after 3 seconds the display will show the actual output pressure.

Only parameter numbers 0, 4, 9, 14, 18, 19, 20, 12, 13, and 21 are accessible to edit. All other parameters are fixed.

### Manual Mode

When keys DOWN and UP are pressed during startup, (connecting to the 24 V power supply) manual mode is activated. This means that the user is able to in/decrease the output pressure of the regulator, by pressing the UP or DOWN key. During this action the display will blink, indicating that the manual mode is activated.



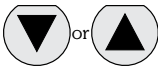

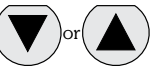







## Back to Factory Setting

After start up. (Power is on)

Parameter 0 = 3

Entering this value in parameter 0 will store the calibrated factory data into the working parameters. (Default calibration data is used)



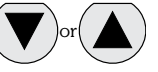

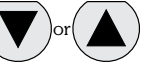







### Parameter Number 0 – Reset Back to Factory Settings

Step	1	2	3	4	5	
Press 	 3-6 seconds					
Until Display Reads			 Flashing Decimal	 Flashing Decimal	 Flashing	
Description	Accesses changeable parameters.	Accesses parameter no. 0.	Displays current parameter value.	Edits parameter. 3 = standard factory settings. If other than 3, use Up or Down Arrow and accept 3	Accepts and saves new parameter setting.	Sequences to next parameter.



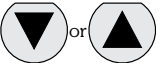

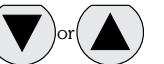







## Set Control Signal

The unit is factory set for 0-10 V control signal. If 4-20 mA control signal is required, change parameter 4.













### Parameter Number 4 – Set Control Signal in Volts or Milliamps

Step	1	2	3	4	5	
Press 	 3-6 seconds					
Until Display Reads			 Flashing Decimal	 Flashing Decimal	 Flashing	
Description	Accesses changeable parameters.	Accesses parameter no. 4.	Displays current parameter value. 1 = V, 0 = mA	Edits parameter.	Accepts and saves new parameter setting.	Sequences to next parameter.

### Parameter Number 6 – Set Output Signal

Step	1	2	3	4	5	
Press 	 3-6 seconds					
Until Display Reads			 Flashing Decimal	 Flashing Decimal (Value 0, 1 or 2)	 Flashing	
Description	Accesses changeable parameters.	Accesses parameter no. 6.	Displays current parameter value. 1 = m factory default for P3H with analog options	Edits parameter. 0 = digital (NPN or PNP) 1 = analog 0..10V 2 = analog 4..20 mA	Accepts and saves new parameter setting.	Sequences to next parameter.



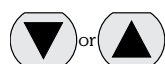









### Parameter Number 8 – Adjust Span Analog Output Signal

Step	1	2	3	4	5	
Press 	 3-6 seconds					
Until Display Reads			 Flashing Decimal (For 2 bar versions value = 92)	 Flashing Decimal (Value between 0 and 130)	 Flashing	
Description	Accesses changeable parameters.	Accesses parameter no. 8.	Displays current parameter value.	Edits parameter.	Accepts and saves new parameter setting and implements the new analog signal span.	Sequences to next parameter.

### Adjust Digital Display

If necessary, adjustments can be made to the digital display when using an external pressure sensor.



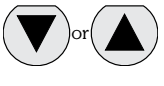

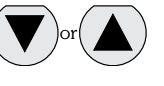







### Parameter Number 9 – Adjust Digital Display Value (Pressure Calibration)

Step	1	2	3	4	5	
Press 	 3-6 seconds					
Until Display Reads			 Flashing Decimal	 Flashing Decimal	 Flashing	
Description	Accesses changeable parameters.	Accesses parameter no. 9.	Displays current digital display	Use up or down arrows and accept to adjust the display value if using an external pressure sensor.	Accepts and saves new parameter setting.	Sequences to next parameter.

## Set Pressure Scale

Units with NPT port threads are supplied with a factory set PSI pressure scale. Use parameter 14 to change scale to bar.




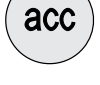







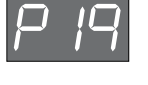
### Parameter Number 14 – Set Pressure Scale in PSI or bar

Step	1	2	3	4	5	
Press 	 3-6 seconds					
Until Display Reads			 Flashing Decimal	 Flashing Decimal	 Flashing	
Description	Accesses changeable parameters.	Accesses parameter no. 14.	Displays current parameter value. 1 = PSI, 0 = bar	Edits parameter.	Accepts and saves new parameter setting.	Sequences to next parameter.

## Preset Minimum Pressure

If there is a need for a pre-set minimum pressure, use parameter 18. (Note: preset pressure is affected by % P19.)

### Parameter Number 18 – Set Minimum Preset Pressure

Step	1	2	3	4	5	
Press 	 3-6 seconds					
Until Display Reads			 Flashing Decimal	 Flashing Decimal (value between 0 and 200)	 Flashing	
Description	Accesses changeable parameters.	Accesses parameter no. 18.	Displays current parameter value. Incremental value is: <u>2 bar unit:</u> x 2 mbar x % P19 <u>10 bar unit:</u> x 10 mbar x % P19	Edits parameter.	Accepts and saves new parameter setting.	Sequences to next parameter.

## Set Pressure Correction



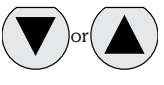

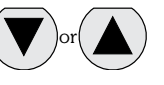


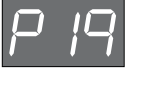




Pressure correction allows the user to set a maximum pressure as a percentage of secondary pressure F.S.

Example: If F.S. is 10 bar, set parameter 19 to 50 for maximum preset pressure of 5 bar.

Pressure correction also affects the minimum preset pressure in parameter 18.

Example: If F.S. is 10 bar and parameter 18 is set to a value of 100 (1 bar), and parameter 19 is set to 50%, then the actual minimum preset pressure seen is 0.5 bar.

### Parameter Number 19 – Set Maximum Preset Pressure












Step	1	2	3	4	5	
Press 	 3-6 seconds					
Until Display Reads			 Flashing Decimal	 Flashing Decimal (value between 0 and 100)	 Flashing	
Description	Accesses changeable parameters.	Accesses parameter no. 19.	Displays current parameter value. Incremental value is: % of F.S.	Edits parameter.	Accepts and saves new parameter setting.	Sequences to next parameter.

## Behavior Control

The regulation speed of the pressure regulator can be modified by means of one parameter. (P 20)

The value in this parameter has a range from 0-5. A higher value indicates slower regulation speed, but will be more stable.

### Parameter Number 20 – Set Behavior Control

Step	1	2	3	4	5	
<b>Press</b> 	 3-6 seconds					
<b>Until Display Reads</b>			 Flashing Decimal	 Flashing Decimal (value between 0 and 5)	 Flashing	
<b>Description</b>	Accesses changeable parameters.	Accesses parameter no. 20.	Displays current parameter value.	Edits parameter 0 = custom set* 1 = fastest (narrow proportional band) 2 = fast, 3 = normal, 4 = slow, 5 = slowest (proportional band is broad)	Accepts and saves new parameter setting.	Sequences to next parameter.



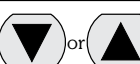









\* When the value 0 is entered, you are able to create your own custom settings true parameters 12, 13 and 21.

## Fine Settings

### Set Proportional Band

Proportional band is used for setting the reaction sensitivity of the regulator. The displayed value is X 10 mbar and has a range between 50 (0.5 bar) and 250 (2.5 bar).



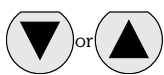

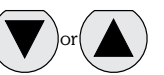







### Parameter Number 12 – Set Proportional Band (P20 Must be Set to 0)

Step	1	2	3	4	5	
<b>Press</b> 	 3-6 seconds					
<b>Until Display Reads</b>			 Flashing Decimal	 Flashing Decimal (value between 50 and 250)	 Flashing	
<b>Description</b>	Accesses changeable parameters.	Accesses parameter no. 12.	Displays current parameter value. Incremental value is: x 10 mbar	Edits parameter.	Accepts and saves new parameter setting.	Sequences to next parameter.

## Set Deadband

Deadband is the minimum limit of accuracy at which the regulator is set for normal operation. The displayed value is X 10 mbar and has a range between 4 (40 mbar) and 40 (400 mbar).



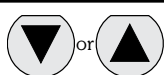

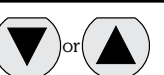







### Parameter Number 13 – Set Deadband (P20 Must be Set to 0)

Step	1	2	3	4	5	
<b>Press</b> 	 3-6 seconds					
<b>Until Display Reads</b>			 Flashing Decimal	 Flashing Decimal (value between 4 and 40)	 Flashing	
<b>Description</b>	Accesses changeable parameters.	Accesses parameter no. 13.	Displays current parameter value. Incremental value is x 10 mbar	Edits parameter.	Accepts and saves new parameter setting.	Sequences to next parameter.



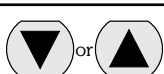




## Proportional Effect

Sets the speed at which the regulator adjusts either filling or exhausting. The displayed value has a range between 5 (fastest regulation) and 100 (slowest regulation).

### Parameter Number 21 – Set Proportional Effect (P20 Must be Set to 0)

Step	1	2	3	4	5	
<b>Press</b> 	 3-6 seconds					
<b>Until Display Reads</b>			 Flashing Decimal	 Flashing Decimal (value between 5 and 100)	 Flashing	
<b>Description</b>	Accesses changeable parameters.	Accesses parameter no. 21.	Displays current parameter value.	Edits parameter. 5 = fastest regulation 100 = slowest regulation.	Accepts and saves new parameter setting.	Sequences to next parameter.

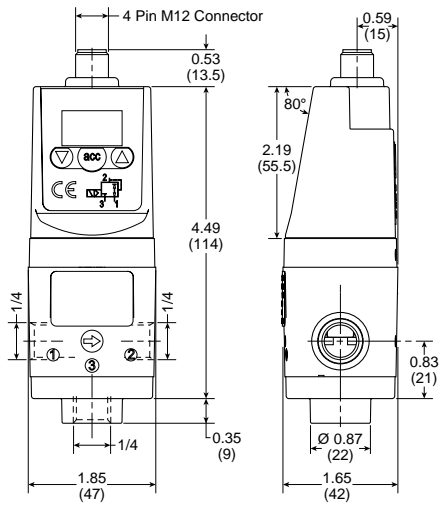
### Parameter Number 39 – Displays Current Software Version

Step	1	2	3	
<b>Press</b> 	 3-6 seconds			
<b>Until Display Reads</b>			 Flashing Decimal	
<b>Description</b>	Accesses changeable parameters.	Accesses parameter no. 39.	Displays current parameter value. XXX = current software version	

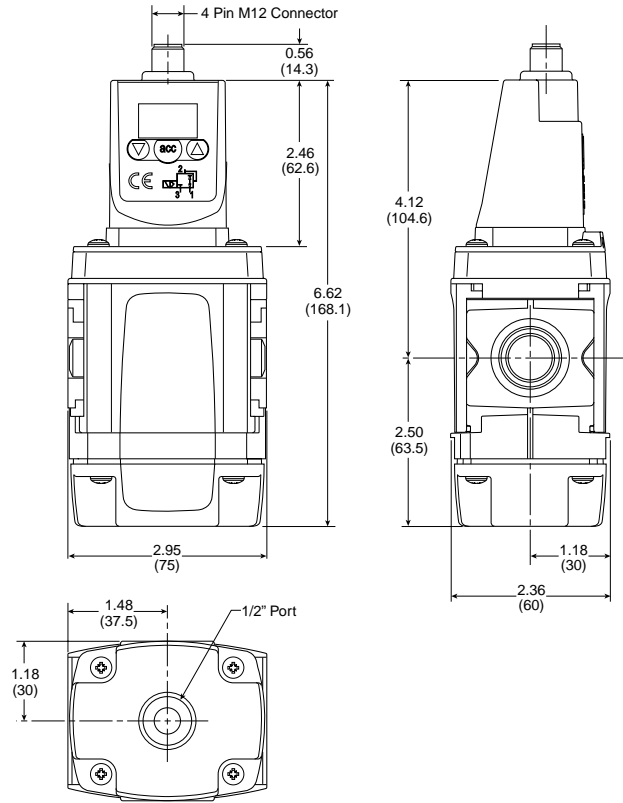
Problem	Possible Reason	Solution
Display will not light up	No 24 volts power supply	Check if the wiring is connected according to the schematic wiring diagram
Unit will not, or not correctly respond to given setpoint	Wrong current applied ( I.e. Volt instead of mA or mA instead of Volt)  Setpoint signal is not stable enough	Change setpoint current or re configure the setpoint current through the software by changing parameter 4  Check wiring if the setpoint signal lead is connected to the right pin within the male M12 connector ( should be pin 2)  Stabilize setpoint signal input
Display shows NoP.	Unit detects that required output pressure is higher than the supplied pressure  No inlet pressure at all	Adjust the inlet pressure to a higher value, preferably 0,5 bar higher than requested output pressure  Give lower setpoint value which corresponds to a output pressure lower than the inlet pressure  Connect port 1 to the supply pressure
Unit behavior is not considered normal	Faulty settings made in the parameters	Reset the unit to factory settings by using the green key function under parameter 0
Desired pressure can not be reached	Setpoint value to low  Pre-set pressure limit has been changed to a lower max. outlet pressure  Supply pressure is to low	Increase setpoint value  Change max. outlet pressure back to required pressure by changing parameter 19  Increase supply pressure
Secondary side stays pressurized	Setpoint value is higher than 0,1 Volt  Pre-set pressure has been enabled to a certain pressure	Lower your setpoint value, preferably to 0 Volts  Reset parameter 18 to 0
Display shows unrealistic value	Display maybe configured in the wrong value ( bar instead of psi)	Check through parameter 14, if the display value is set on either psi or bar, if necessary change it to the required setting
Unit response time too slow or too quick	Volume behind the unit is either too big or too small	Adjust the regulating speed of the unit through parameter 20
Unit gives too much overshoot	Relation between volume and response me is out of balance	Adjust response time to a higher value through parameter 20, to achieve more accurate behavior
Unit is adjusting/regulating constantly	Air leakage in the system behind the unit  Constant changing volume behind the unit  "Deadband "area is set too small	Resolve leakage  Unit needs to regulate to keep required pressure at the same level  Try to minimize the volume changes  Enlarge deadband setting through parameter 13 in the software ( parameter 20 has to be set to 0 before changing parameter 13)
Can not enter software through touchpad	Unit is currently working/processing  Activating time is too short	Make sure that the unit is in steady state while activating the software  Hold the accept button for at least 3 seconds
Display indicates 'OL'	Wiring not according to diagram (24 volt connected on the setpoint connection pin)  Wrong setpoint value given in relation to programmed setpoint value acceptance	Rewire so that on the setpoint connection pin will be either 0-10v or 4-20mA  Change over setpoint value to either V or mA or Reprogram the unit to the correct setpoint value via parameter 4
Any other problem	Please consult factory	

Dimensions

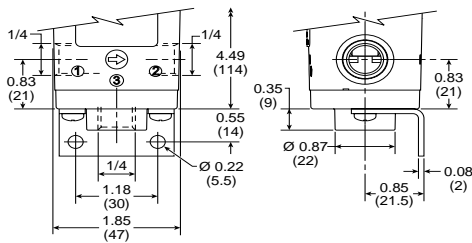
40mm Bottom Exhaust Version



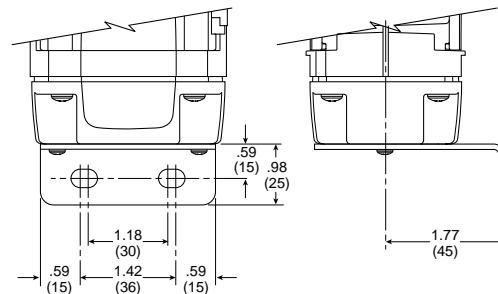
60mm Bottom Exhaust Version



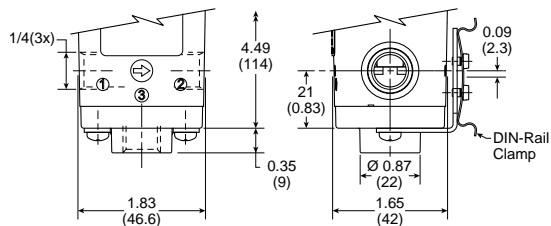
Foot Bracket



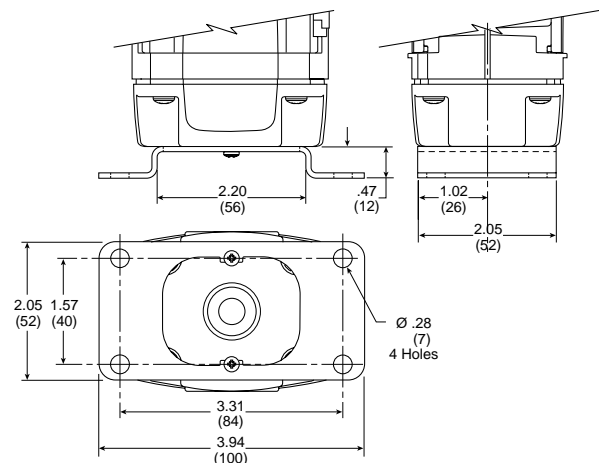
L Bracket



DIN Rail Bracket



Foot Bracket



Dimensions are in mm (Inches)

Dimensions are in mm (Inches)